NATURAL TEAK WOOD



Our wood furniture is crafted from the world's most premium Grade A teak. This luxurious material is renowned for its durability and resistance to harsh weather making it perfect for outdoor living.

Features and Benefits



Contract Quality (Grade A) Grade A teak is cut from the center of mature timber for an incredibly uniform colour, finish, and hardness. Unlike lesser grades, A-grade teak maintains its integrity as it gracefully weathers while resisting degradation.



Durable

Teak's natural oil repels water and prevents it from warping, cracking becoming brittle, which helps teak retain its shape and good looks for many years.



Easy Care

Remove moss, dirt, and surface stains, with an occasional wash with soapy water and a soft nylon brush. For added surface resistance, we recommend applying clear natural linseed oil Golden Care® Teak Protector, or a natural teak oil.



Environment Resistant

Teak has a demonstrated ability to withstand the harsh effects of the weather as it has a natural oil that repels water and prevents it from warping, cracking or becoming brittle. Teak can be left outside all year round, even in extreme weather conditions.

Teak Colour Variations

Teak is a tropical hardwood with a raw, natural colour. Over time, as teak is exposed to outdoor elements, it gradually changes to a silver-grey patina. In moist climates, teak will weather more quickly. We recommend applying clear natural linseed oil, Golden Care® Teak Protector or a natural teak oil to maintain a golden-brown colour.



New



6 months*



12 months

*Indicative only. Wood is an organic material and colours will vary.

MAD DESIGN GROUP

maddesigngroup.com

NATURAL TEAK WOOD

CAUTION

Liquid dripped onto a raw wood surface may stain the finish if it has not been oiled or sealed.

FAQ's

Which teak care product do you recommend?

If you choose to apply oil to your furniture, we recommend using clear natural linseed oil (not boiled), Golden Care® Teak Protector or a natural teak oil.

How often do I need to apply the teak protector?

Depending on your environment, the raw, natural colour may change within 4-8 weeks. We recommend that you apply clear natural linseed oil, Golden Care® Teak Protector or a natural teak oil every 6-12 months while exposed to sun, humidity, rain, and other outdoor elements.

Should I use water or oil-based care products?

We only recommend clear natural linseed oil, Golden Care® Teak Protector or any suitable teak oil.

How do I clean my teak furniture?

Remove moss, dirt, and surface stains with an occasional wash with soapy water and a soft nylon brush.

How do I apply Teak Protector

Please refer to the manufacturer's instructions for optimal results.

Should I cover my teak furniture?

While not required, we offer all-weather covers for our fire table collections.

For any questions or concerns, please contact our customer support team.

MAD DESIGN GROUP